

Installation instructions Spring Leaf Bushing

Set # 30.2001 & Set # 30.2002




1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

© 2008 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle.

Apply a light coat
of grease to the I.D
and the O.D.

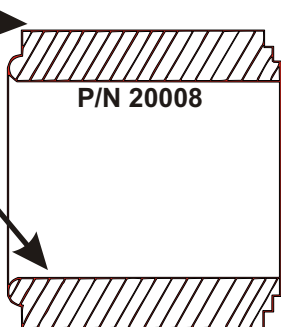

Set # 30.2001



Set # 30.2002

Apply a light
coat of grease
to the I.D.

17100
24JUN08 BRH

Clean eye on spring leaf. Remove all old rubber and any scale.
The single stepped end of the bushing goes to center of the eye.

Installation instructions Spring Leaf Bushing

Set # 30.2001 & Set # 30.2002




1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

© 2008 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle.

Apply a light coat
of grease to the I.D
and the O.D.

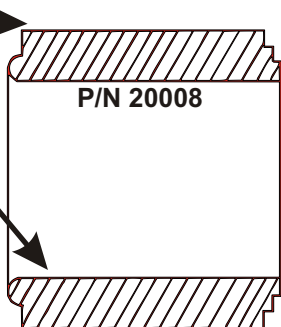

Set # 30.2001



Set # 30.2002

Apply a light
coat of grease
to the I.D.

17100
24JUN08 BRH

Clean eye on spring leaf. Remove all old rubber and any scale.
The single stepped end of the bushing goes to center of the eye.